


Wiring Diagram

Time Delay Switch Slave

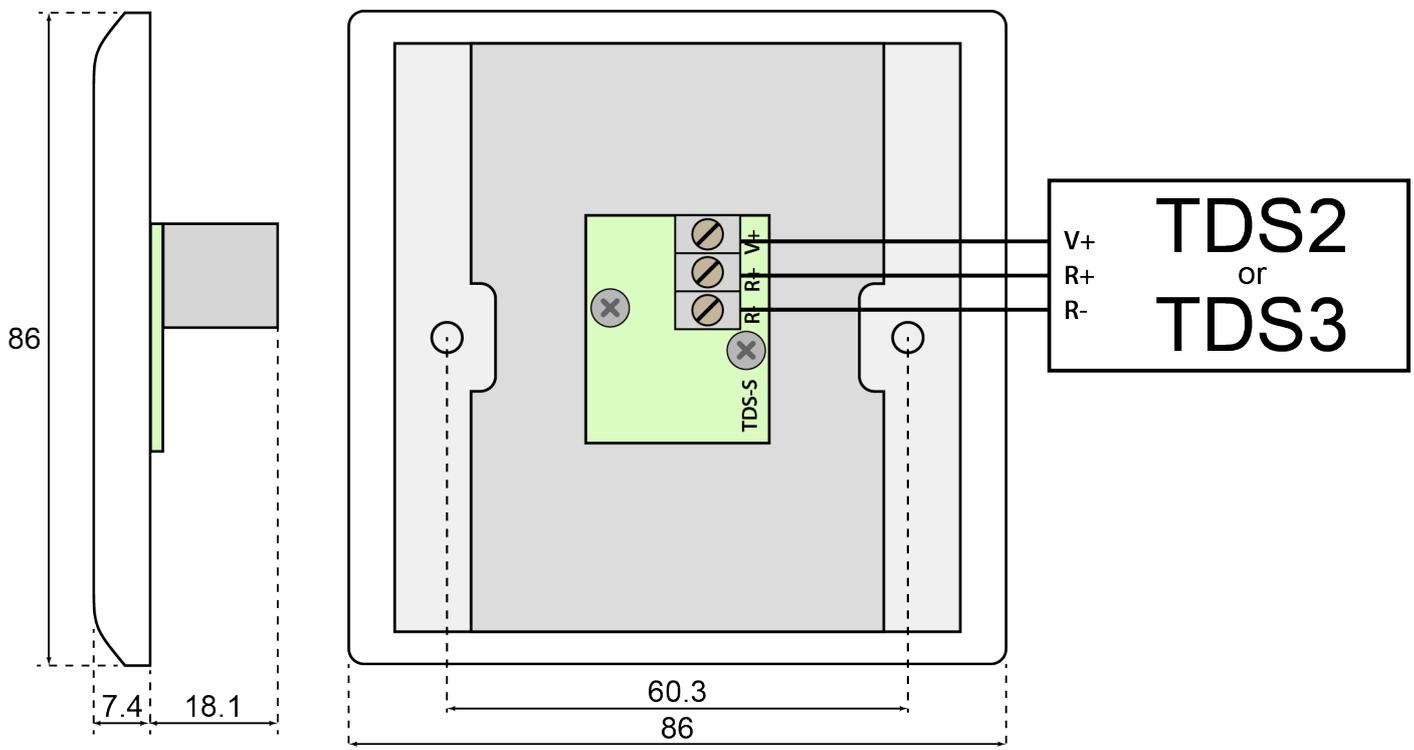

Installation

1. **IMPORTANT:** ensure all electrical connections are isolated before commencing any work on the unit.
2. Connect the wiring as shown in Figure 1. Observe closely the polarity of the connections (V+ to V+, R+ to R+, R- to R-). Low current 3-core mains cable should be used.
3. **NOTE:** Do not use low voltage cable. Select appropriate rated cable i.e. the cable must have insulation designed for mains voltages.

IMPORTANT INSTALLATION NOTICE

The installation of this product should be carried out in accordance with the latest IEE wiring regulations and all wiring completed by a qualified electrician.