


Wiring Diagram

Time Delay Switch Slave

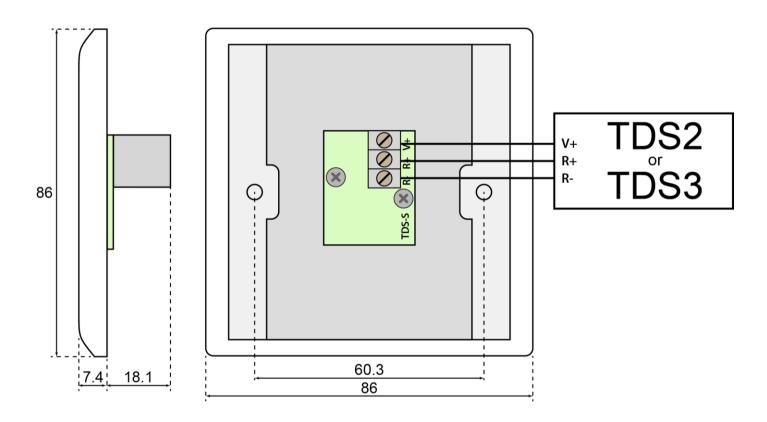

Installation

- 1. **IMPORTANT**: ensure all electrical connections are isolated before commencing any work on the unit.
- 2. Connect the wiring as shown in Figure 1. Observe closely the polarity of the connections (V+ to V+, R+ to R+, R- to R-). Low current 3-core mains cable should be used. **Do not use low voltage cable.**

IMPORTANT INSTALLATION NOTICE

The installation of this product should be carried out in accordance with the latest IEE wiring regulations and all wiring completed by a qualified electrician.